





- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- *Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- •Professional installation recommended.

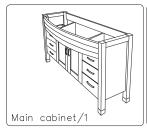








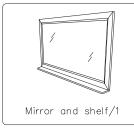





INSTALLATION AND ADJUSTMENT OF HINGES











REQUIRED TOOLS NOT IN BOX













Spirit Level





Silicone sealant

Tape measure Pencil


Electric Drill INSTALLATION INSTRUCTIONS



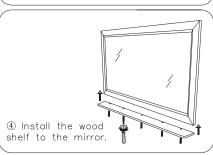




2 STONE SINK OPTION: Attach sink to stone counter using supplied clips and wingnuts(Do not over tighten). Silicone sink to counter. Attach pop-up drains and silicone counter to vanity.

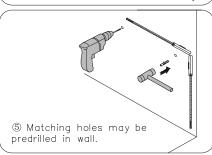

3 Glass sink option: Instal the counter and pop-up drains. Seal around the front and back of the cabinet top with clear silicone sealant.

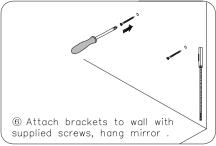

WC-A-2109-60 INSTALLATION