


WYNDHAM COLLECTION

INSTALLATION GUIDE

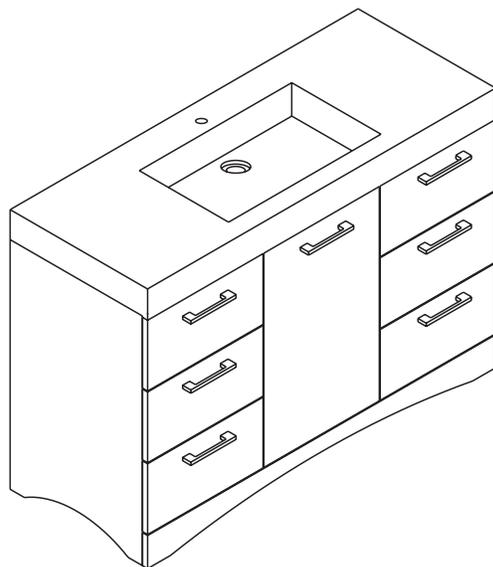


Tools and parts list




Silicone

- 1** Attach counter to cabinet with silicone sealant applied to top of front and side cabinet edges. Do not over-apply. Allow to dry for 24 hours for proper curing.

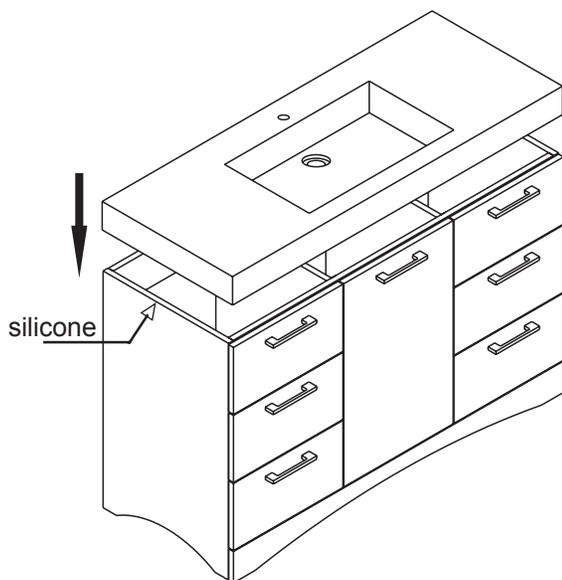

- 2** Licensed professional installation is recommended. Other installation techniques may require a licensed professional.

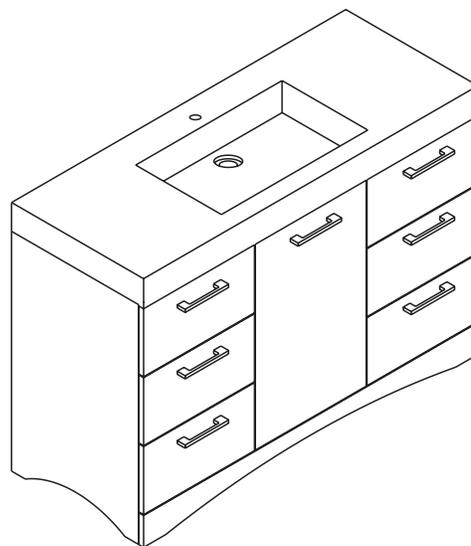


WC-R4400-48-
RESIN-INSTALLATION


WYNDHAM COLLECTION

INSTALLATION GUIDE

WC-R4400 MIRROR

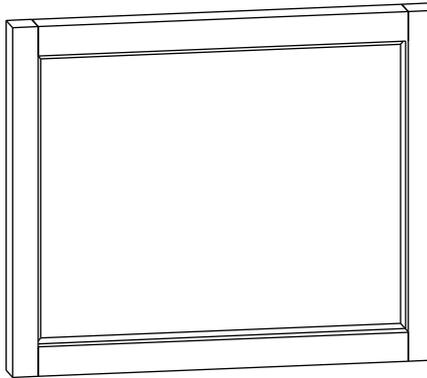


1

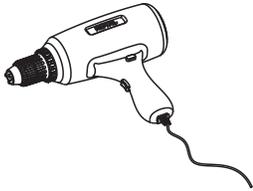

Electric drill




Tape measure

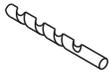

Drill bit
($\Phi 8$)



Pencil

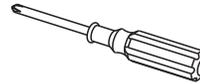

Screwdriver

2




2B




2C


3

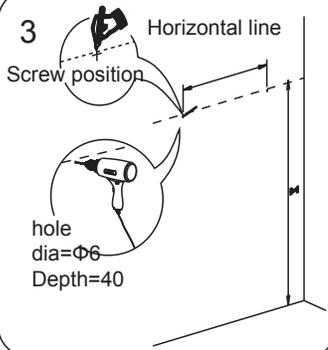

4

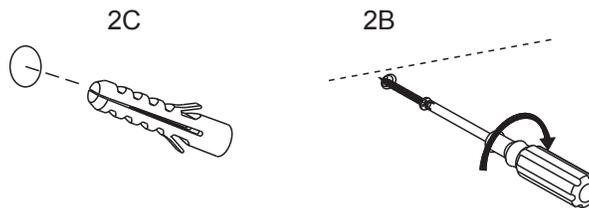

5

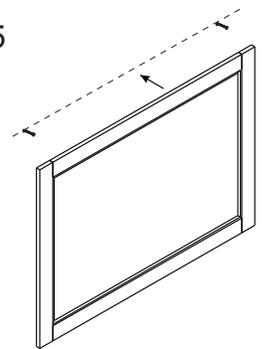

WC-R4400-M46-
INSTALLATION