

WYNDHAM Collection

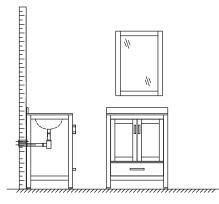


- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- $\bullet \ Professional installation recommended.$

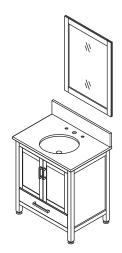


PACKING LIST

(Not all components may be included, depending upon your purchase)




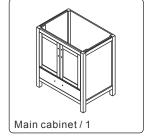


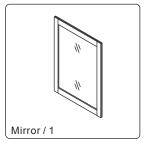




HOW TO ADJUST HINGES (if required)








REQUIRED TOOLS NOT IN BOX




WC-1414-30 Installation Guide


WYNDHAM Collection

INSTALLATION INSTRUCTIONS

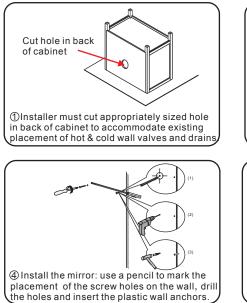


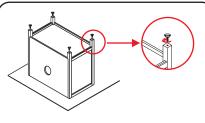

② Adjust the feet if needed.

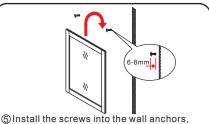

(5) Install the screws into the wall anchors, leaving enough of the screw exposed to hang the mirror - approx 1/4" - 1/2".

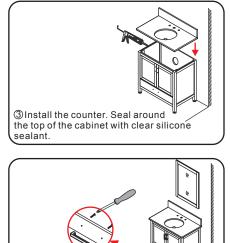

©Remove the handles from inside the cabinet doors and drawers and reinstall on the outside.Do not over-tighten when reattaching.

WC-1414-30 Installation Guide