



# WYNDHAM COLLECTION


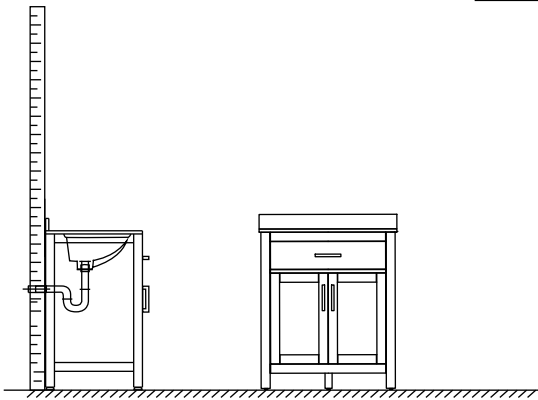


- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.





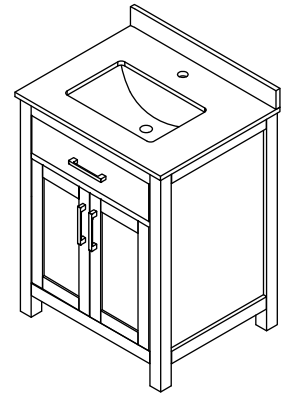


## PACKING LIST

(Not all components may be included, depending upon your purchase)

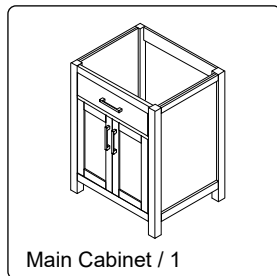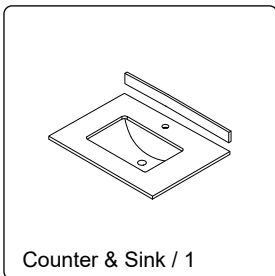


## HOW TO ADJUST HINGES (if required)

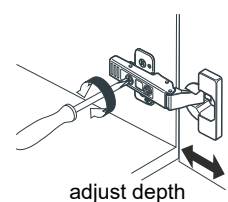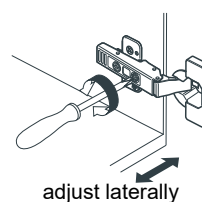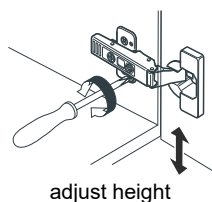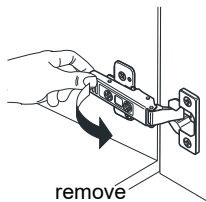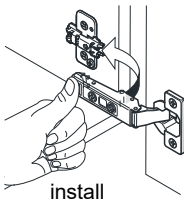


## REQUIRED TOOLS NOT IN BOX



Silicone sealant



Spirit Level




Phillips Screwdriver


# WC-2424-30-SGL Installation Guide

# WYNDHAM COLLECTION

## INSTALLATION INSTRUCTIONS

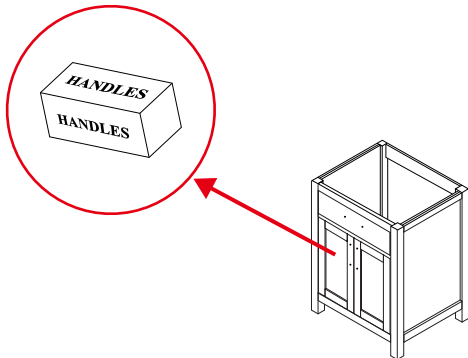


- ① The handles are safely stored for transport in a box inside of the cabinet. Look inside the vanity for the box with your handles.

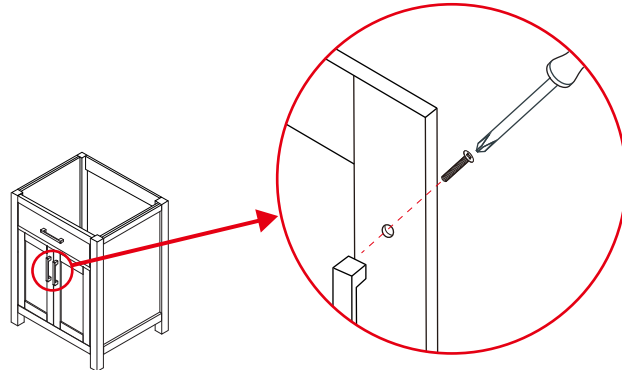


- ② Unpack the handles and install them on the vanity. Do not over tighten when attaching.


Short, for door handles



Long, for drawer handles



- ③ Short screws are for the door handles and long screws are for the drawer handles.

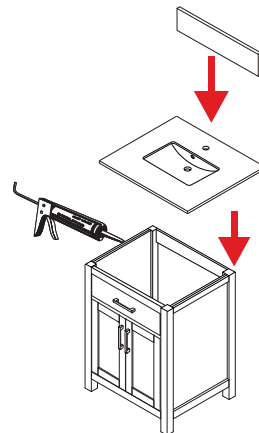

- ④ Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

WC-2424-30-SGL  
Installation Guide