

WYNDHAM Collection

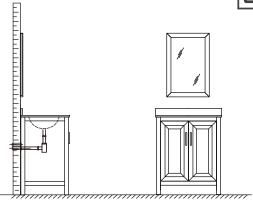


- Prior to installation please check received items against the "Packing List".
 Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

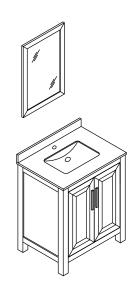


PACKING LIST

(Not all components may be included, depending upon your purchase)




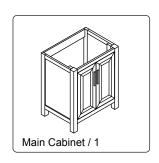

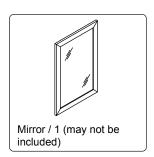




HOW TO ADJUST HINGES (if required)







REQUIRED TOOLS NOT IN BOX








Pencil



Electric Drill



Phillips Screwdriver



Spirit Level




Silicone sealant

WC-2525-30 Installation Guide




INSTALLATION INSTRUCTIONS

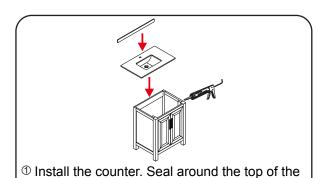


cabinet with clear silicone sealant. Do not over


apply. Allow to dry 24 hours for proper curing.

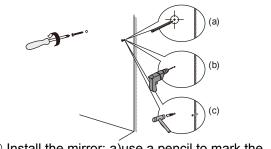

 Install the mirror: a)use a pencil to mark the placement of the screw holes on the wall,
b)drill holes, c)insert the plastic wall anchors.

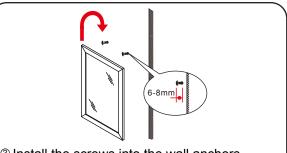

③ Install the screws into the wall anchors, leaving enough of the screw exposed to hang the mirror - approx 1/4" - 1/2".

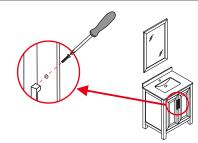

 Remove the handles from inside the cabinet doors and drawers and reinstall on the outside. Do not over tighten when reattaching.

WC-2525-30 Installation Guide