



- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.
- Backsplash comes in two pieces.

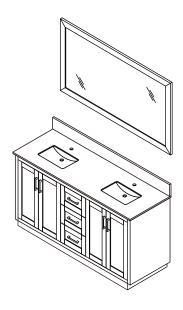

PACKING LIST

(Not all components may be included, depending upon your purchase)

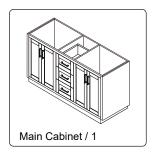











HOW TO ADJUST HINGES (if required)











REQUIRED TOOLS NOT IN BOX



Silicone sealant







Phillips Screwdriver



Tape measure



Pencil




Electric Drill


WC-2929-72-DBL Installation Guide




INSTALLATION INSTRUCTIONS

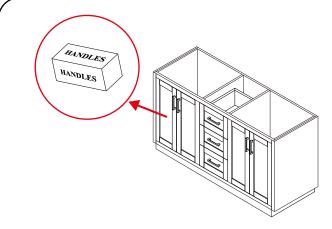


1 The handles are safely stored for transport in a box inside of the cabinet. Look inside the vanity for the box with your handles.

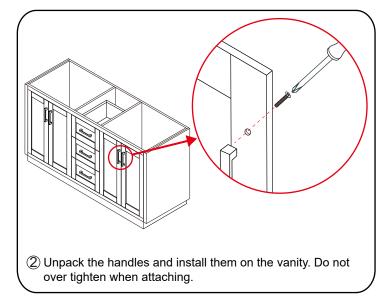

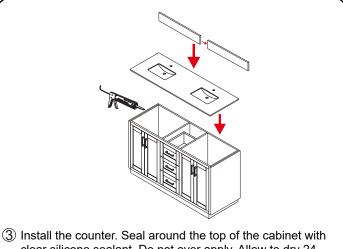


clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

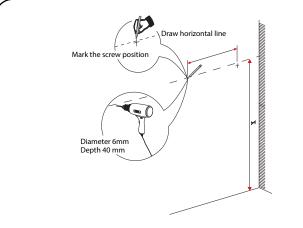


4 Install the mirror: use a pencil to mark the placement of the screw holes on the wall, drill the holes and insert the plastic wall anchors.

WC-2929-72-DBL Installation Guide



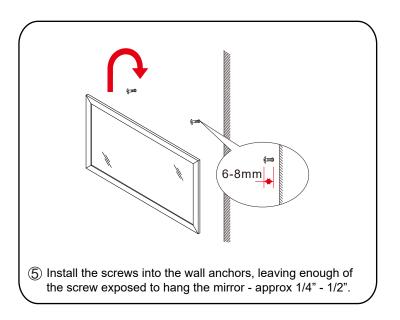


HOW TO ADJUST DRAWER SLIDES (if required)

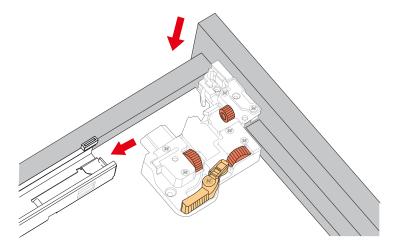


Up and Down Adjustment

WC-2929-72-DBL Installation Guide

WYNDHAM COLLECTION

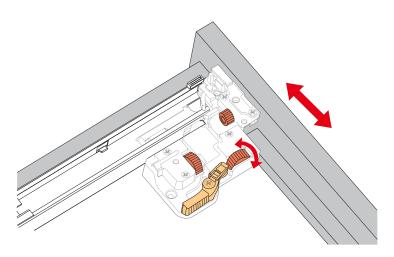

Side Adjustment

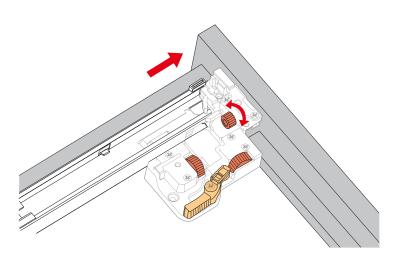

Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides

WC-2929-72-DBL Installation Guide