



- · Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.

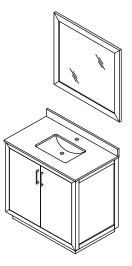


PACKING LIST

(Not all components may be included, depending upon your purchase)

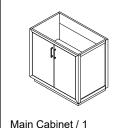



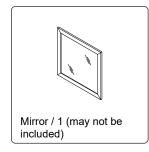






Main Cabinet / 1


HOW TO ADJUST HINGES (if required)











REQUIRED TOOLS NOT IN BOX













Silicone sealant

Spirit Level


Phillips Screwdriver


Tape measure


Pencil


Electric Drill

INSTALLATION INSTRUCTIONS

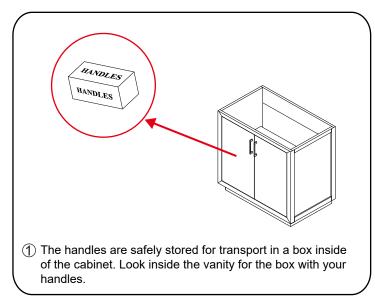


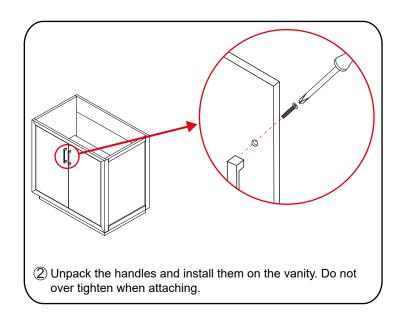


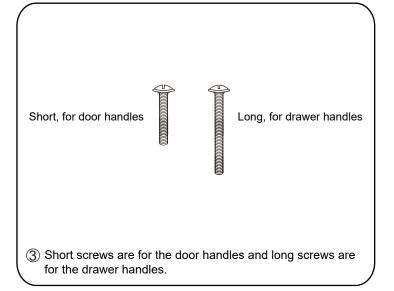

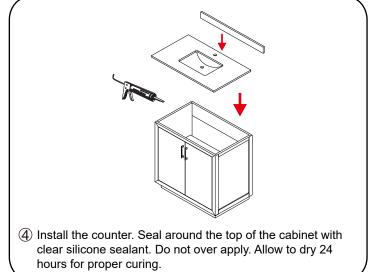




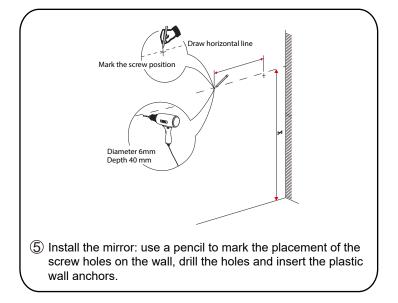


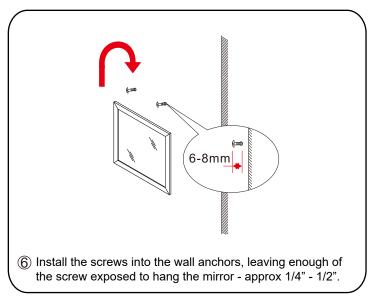

HOW TO ADJUST DRAWER SLIDES (if required)

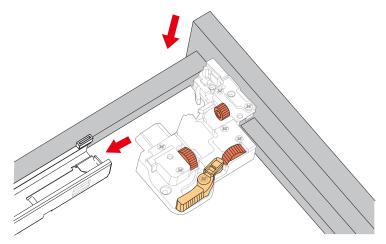

Up and Down Adjustment

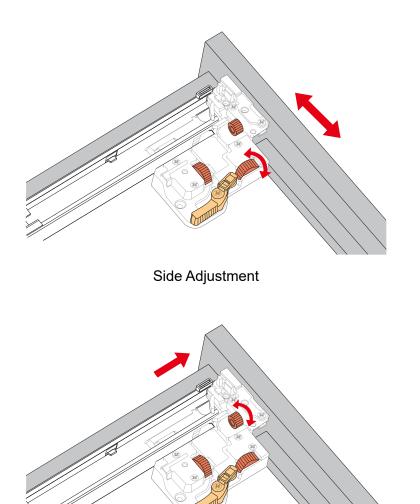


Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides

Backboard Cutouts

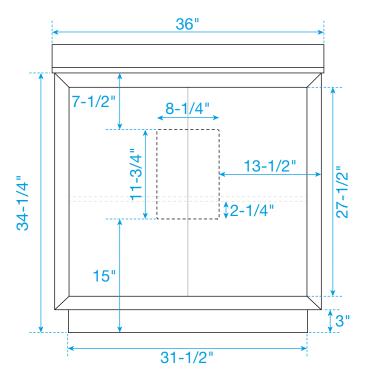

*Note: All measurements are $\pm 1/4$ ".

Electrical Outlets with Charging Hub

