



- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions on the next page.

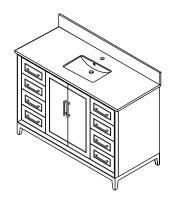

PACKING LIST


(Not all components may be included, depending upon your purchase)








HOW TO ADJUST HINGES (if required)











REQUIRED TOOLS NOT IN BOX









Phillips Screwdriver



Tape measure




Pencil



Electric Drill



INSTALLATION INSTRUCTIONS

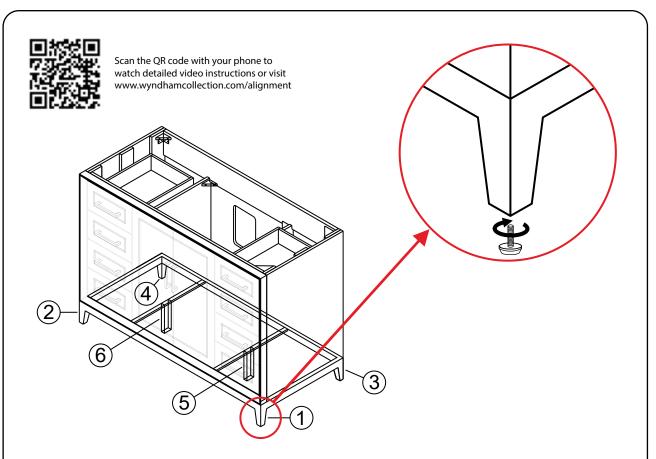

① CABINET ALIGNMENT GUIDE

ALL cabinets are aligned, and metal trim is adjusted on a level floor before packaging.


After shipping and reaching its destination, the cabinet doors and drawers may require minor alignment, depending on the condition of the floor where it will be installed.

DO NOT move/adjust the door hinges or drawer glides before leveling/adjusting the cabinet on the floor.


Start by adjusting the back two feet #3 and #4 by bringing the cabinet to a level position. Use a spirit level to ensure accuracy. After adjusting all four feet (front and back) check the metal trim alignment. If the metal trim lines are not aligned, start adjusting the middle two feet #5 and #6 (under the cabinet) by moving the adjustable feet UP or DOWN depending on the condition of your floor. After leveling the metal trim lines using the middle feet (under the cabinet) make sure all 6 vanity feet are firmly resting on the floor and the cabinet is perfectly level.

By following the above instructions all the metal trim lines should now be aligned. Minor adjustment may be necessary by adjusting the door hinges and drawer glides, see How To Adjust Hinges on page 1, and How to Adjust Drawer Slides on page 4.


WYNDHAM COLLECTION

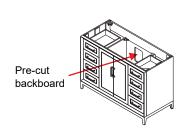


② Backboard is pre-cut for ease of installation for hot and cold valves and drains.

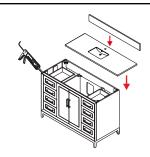

③ Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

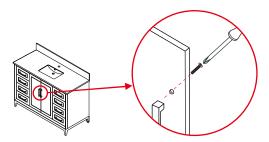


④ Remove the handles from inside the cabinet doors and drawers and reinstall on the outside. Do not over tighten when reattaching.

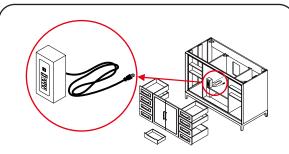


⑤ Plug in electrical outlet and USB charging hub.




HOW TO ADJUST DRAWER SLIDES (if required)

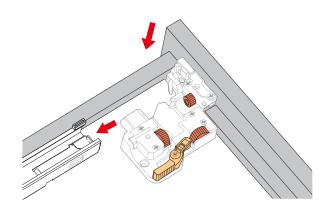

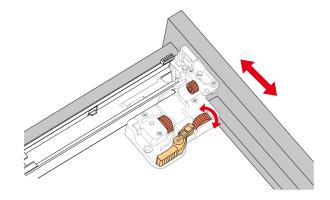

Up and Down Adjustment

Side Adjustment

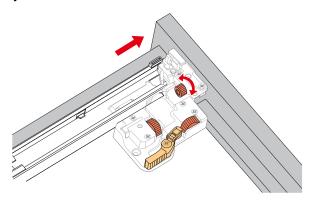


Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides



Backboard Cutouts

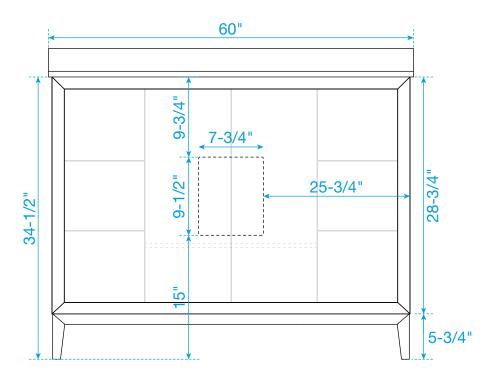

*Note: All measurements are ± 1/4".

Electrical Outlets with Charging Hub

Easy to install
Long 5 foot plug in cord
2 electrical outlets, 125V 15A
Tamper Resistant (TR) outlets
Power reset switch
2 USB ports, 5V 2.1A Max
Use with ground-fault circuit interrupter (GFCI) outlets only
Residential use only
Follow all applicable electrical codes
ETL Listed
Conforms to UL Standard 962A
Certified to CAN/CSA Standard C22.2 No. 308

